

Progression Preamplifier DAC JRiver Settings Instructions


2017-09-18

Before starting with JRiver, make sure to install the Windows USB driver for the DAC. The latest Windows driver for the Progression Preamplifier is available at the Dan D'Agostino Master Audio Systems website, www.dandagostino.com, on the Progression Preamplifier product page.



Go to www.jriver.com




Click the download link

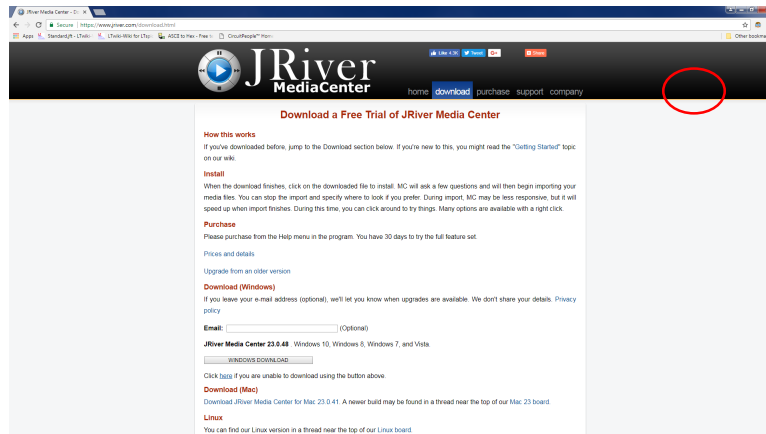

Click the button to download the Windows Version. The installer will save to your Downloads folder. Double-click on the MediaCenterXXXXX.exe icon and then click "Run" to run the installer.

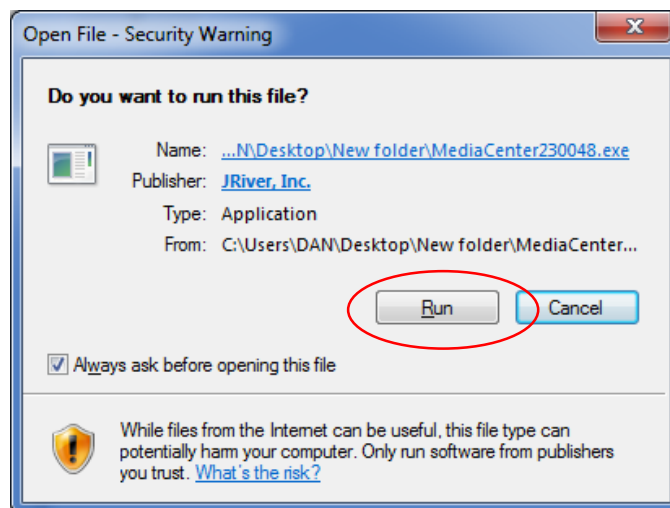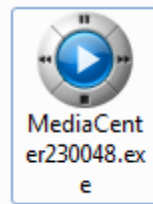


Click to accept the license agreement.

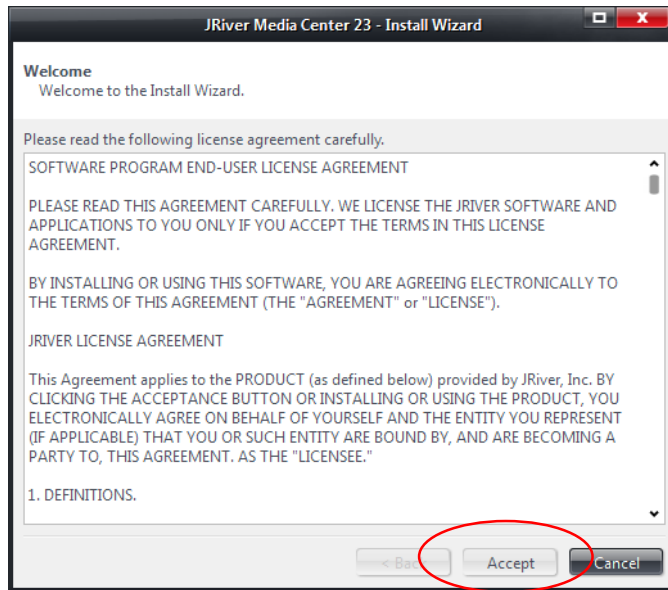


Let the installer run...




Select the audio/video file types you want JRiver to handle. Click Next when you are done.

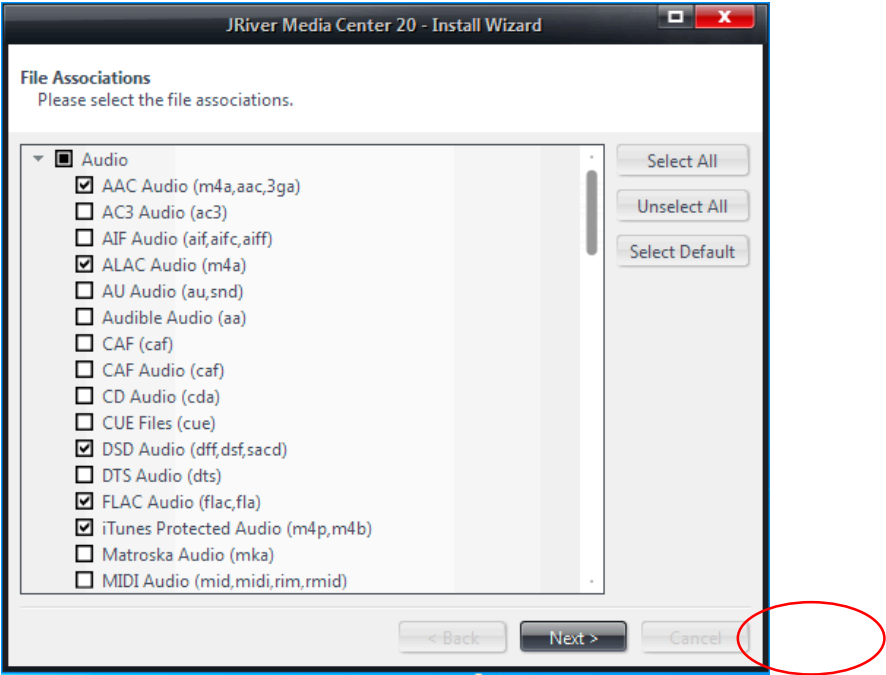


Enter your Registration Code in the box.

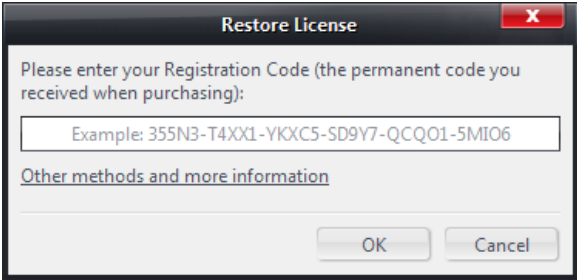

Click OK

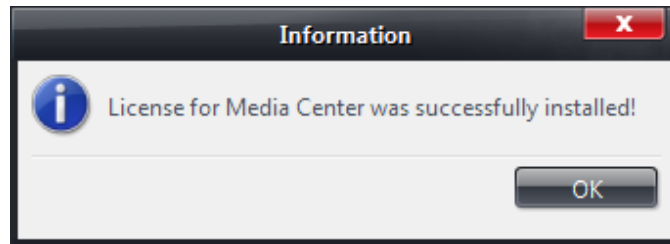

Go to Player/Playback Options and select the Audio category. Select the AKDesign USB [ASIO] option

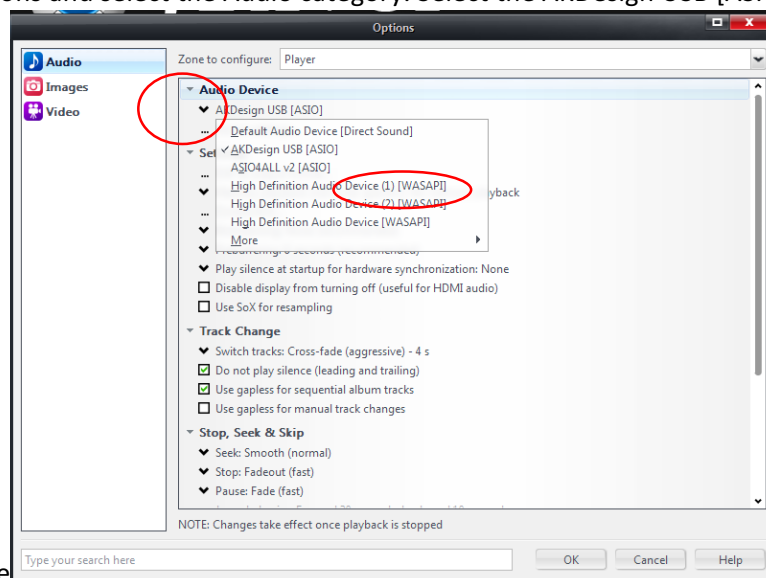

under Audio Device

Go to tools/options/general. Under the Features heading, check the ASIO driver and WDM driver boxes.

