



PROGRESSION INTEGRATED AMPLIFIER  
RS-232 COMMANDS

S0 = Standby  
S1 = On  
S? = QUERY

F? = QUERY FIRMWARE VERSION  
R = RESET

Ix = INPUT  
x = INPUT NUMBER 1-10.  
1 = SERVER  
2 = AUX  
3 = THEATER  
4 = RADIO  
5 = PHONO  
6 = DAC  
7 = USB  
8 = SPDIF  
9 = OPTICAL  
10 = NETWORK  
I? = QUERY

M0 = UNMUTE  
M1 = MUTE  
M? = QUERY

G0 = LOW GAIN  
G1 = HIGH GAIN  
G? = QUERY

P0 = PHASE NORMAL  
P1 = PHASE INVERTED  
P? = QUERY

VU = VOLUME UP 1 STEP

VD = VOLUME DOWN 1 STEP

Vxy = VOLUME SET TO xy

xy = 0-89

V? = QUERY

Bx = BALANCE

x = -20 (LEFT) THROUGH 20 (RIGHT)

B? = QUERY